



FITTING INSTRUCTIONS FOR


# Barrier Shelf

SKU

**KS0228**

COMPATIBILITY

**Toyota LandCruiser LC76**

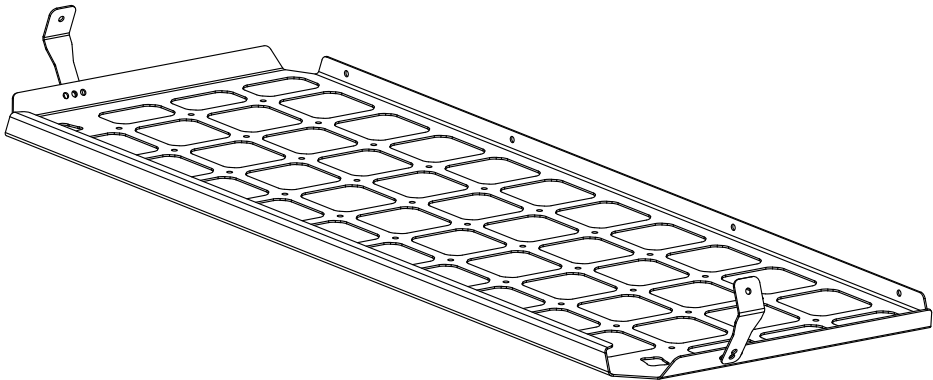

## Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Barrier Shelf	6	M6 x 16 Flanged Hex Bolt G8.8
2	Barrier Shelf Bracket	6	M6 Flanged Nut



**Time**

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

## NOTICE

We cannot confirm compatible fitment of this shelf with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the shelf.

### Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

## Let's get to work.

### Preparation

1. Undo the M6 handle bolts and place the shelf brackets over the top of the barrier brackets. Loosely attach with handle bolt.



## Installation

1. Loosely attach the shelf to the barrier using 4 of the supplied M6 bolts and nuts.
2. Attach the shelf to the rear handle brackets using the remaining supplied M6 bolts and nuts.
3. Once the shelf is in the desired position, tighten all bolts securely.





### **Local Knowledge & Assistance**

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

**For further information call 07 3180 1470 or email [info@kaon.com.au](mailto:info@kaon.com.au)**

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.